

Silhouette® LP Instructions for Use

Product Number: RS5


Assembly

The Silhouette® LP foot module is pre-assembled consisting of a graphite component (keel), sole plate, Spectra™ sock, tube clamp, and foot shell. The Silhouette® LP requires a male or female tube clamp to connect to other prosthetic components. When assembling the tube clamp, ensure the pylon and insert are fully seated before tightening. Always attach the tube clamp with the bolt in the posterior position. If height adjustments are required after the pylon is cut, the optional Versa-Clamp (AC-123L) should be used with the appropriate height spacer ring(s). Foam *stiffening bumpers* for increasing heel stiffness are provided. After dynamic alignment, torque pyramid adjustment screws to the manufacturer's specifications. Secure pyramid adjustment screws with a thread locking adhesive (i.e., Loctite 242).

Bench Alignment

Prior to donning the prosthesis:

- Plantarflex/Dorsiflexion foot module to match the shoe heel height.
- Adduct/Abduct socket to provide appropriate frontal plane angle.
- Flex/Extend socket to provide appropriate sagittal plane angle.
- Move the socket linearly to ensure the weight line falls along the anterior edge of the pylon (see illustration).

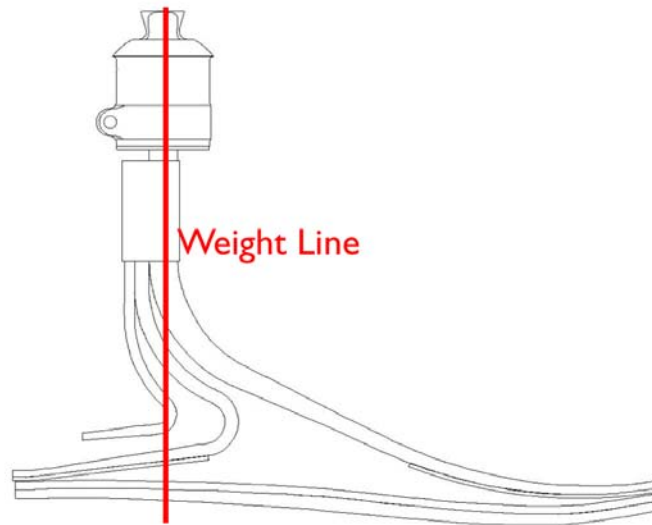

Dynamic Alignment

During *loading response*, the sole plate and heel lever store energy and release it during *midstance*. This action provides momentum for the keel to store energy and release it during *terminal stance*. To optimize the heel to toe rollover motion, adjust the following variables:

- Anterior/posterior foot placement
- Dorsiflexion/plantarflexion
- Heel stiffness

Troubleshooting

Heel too soft

Symptoms

- Foot flat occurs too rapidly
- Toe feels excessively stiff
- Knee hyperextension

Solutions

- Shift socket anteriorly in relation to the foot
- Attach foam *stiffening bumpers*

Heel too hard

Symptoms

- Rapid knee flexion, instability
- Heel to toe progression too rapid
- Lack of energy return sensation

Solutions

- Shift socket posteriorly in relation to the foot
- Verify appropriate foot module category

Foot module too stiff

Symptoms

- Flat spot in rollover motion at slow cadences

Solutions

- Consider a lower category foot module

Foot module too soft

Symptoms

- Clicking noise at *initial contact*
- Excessive toe deflection with high impact activity

Solutions

- Consider a higher category foot module

Stiffening Bumpers

Foam *stiffening bumpers* are included to adjust the heel stiffness during *loading response*. The bumpers may be temporarily attached with tape between the heel levers. If the bumpers provide excessive heel stiffness, exclude or trim as appropriate. For permanent placement, adhere bumpers using Barge or similar contact cement.

Spectra™ Sock

A Spectra™ sock is provided to protect the foot shell and minimize noise. Spectra™ socks must be replaced at intervals appropriate to the user's activity level. Failure to inspect and replace the Spectra™ socks may prematurely wear the foot module, and will void the warranty.

Foot Shell

When removing or installing the foot shell, use the Foot Shell Removal Tool (ACC-00-10200-00) to prevent damage to the foot module.

Silhouette® LP

Minimum clearance:	Size	Clearance
	22-25 cm	6.8 in
	26-28 cm	7.3 in
	29-31 cm	7.7 in

System

Maximum user weight: 166 kg (365 lbs)
 Available sizes: 22cm-30cm (31cm on special order)
 Heel height: 3/8"
 Warranty: Graphite components/pyramid connector (36 months)
 Foot shell (6 months)

Maintenance

The foot module requires periodic maintenance.

- Inspect the foot module every six months. If the user is more active, more frequent inspection may necessary. Service as necessary. Replace Spectra™ sock and/or foot shell if worn to prevent damage to the graphite components.
- The foot module may be cleaned and/or disinfected with soap and warm water.
- Do not allow aggregates such as sand to remain in the *foot shell*. Upon exposure to aggregates, immediately disassemble foot module and rinse with water. The abrasive properties of aggregates will quickly wear the graphite components of the foot module.

Warnings

Failure to adhere to the guidelines of the *Instructions for Use* will void the warranty.

- Never assemble the Silhouette® LP foot module with the tube clamp insert extending past the end of the clamp.
- Failure to install the tube clamp with the bolt in the posterior position may result in failure and/or bodily injuries.
- Never use the foot module without a *foot shell*.
- Never assemble the *sole plate* inside the Spectra™ sock of the Silhouette® LP foot module. This will lead to premature failure of the foot module.
- Never use the Silhouette® LP foot module without the *sole plate*. *Sole plate* removal will adversely affect the performance of the foot module. The *sole plate* fills the mid-foot void between the heel lever and toe lever, preventing potential user injury.

- Freedom Innovations foot modules are manufactured to fit industry standard pyramids and receivers. It is the prosthetist's responsibility to select and/or fabricate properly fitting attachment components.
- Freedom Innovations foot products are manufactured and tested for a particular weight and activity impact level. Use by another user for whom it was not originally manufactured may cause injury and shall void any written or implied warranty.



30 Fairbanks, Suite 114
 Irvine, California 92618
 Toll Free (888) 818-6777
 FAX (949) 672-0084

<table border="1" style="display: inline-table;"> <tr> <td style="padding: 2px;">EC</td> <td style="padding: 2px;">REP</td> </tr> </table>	EC	REP	Advena Ltd., Hereford, HR4 9DQ
EC	REP		